


Main layout drawing

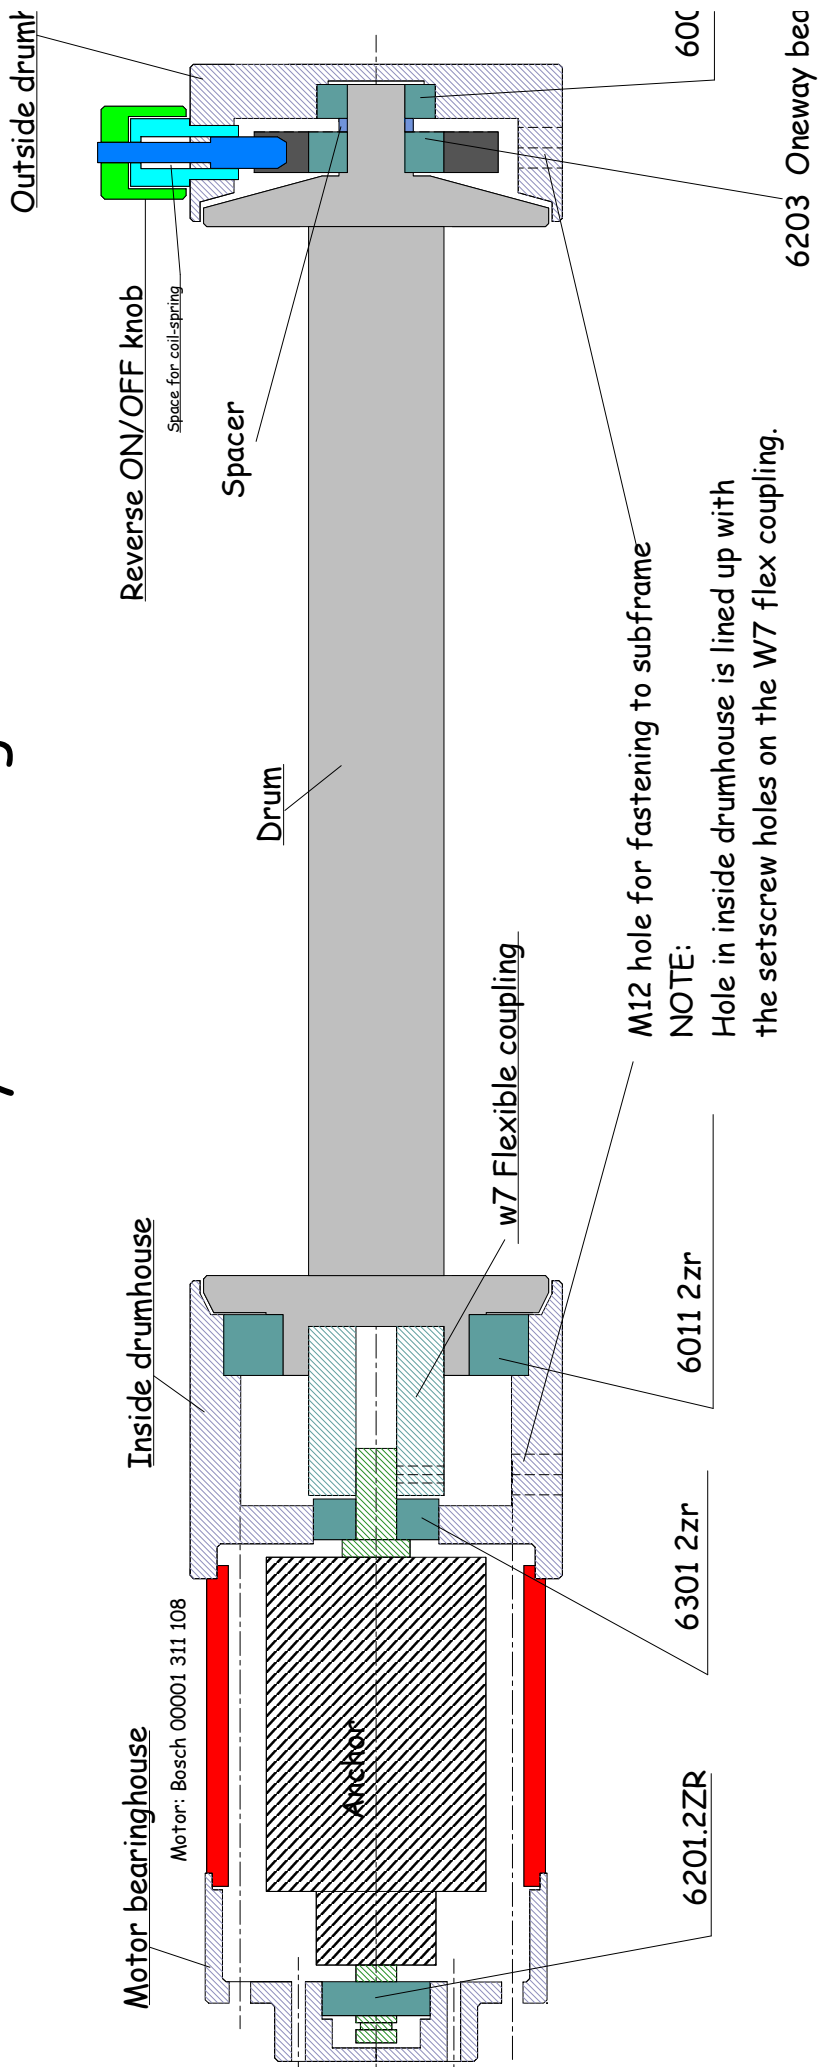

M12 hole for fastening to subframe
 NOTE:
 Hole in inside drumhouse is lined up with
 the setscrew holes on the W7 flex coupling.